

TABLE OF CONTENTS

	PAGE
WHEEL MOTORS	
Troubleshooting Guide	6
Tools Required for Servicing	6
Disassembly & Inspection	6-12
Assembly	13-20
Rotor Set Component Assembly Procedure	21
Wheel Motor Application Guide	22
Wheel Motor Breakdown & Parts List	23-33
 HYDRO PUMPS	
Introduction/ Troubleshooting Guide	34
Tools Required for Service	35
BDP-10L Tightening Torques	36
PG-BDP-10A/PK-12/PR-BPD-16A Tightening Torques	37
BDP-21L Tightening Torques	38
H1A-12 Tightening Torques	39
BDP-10L Pump-Service & Repair	40-50
Purging of System	51
BDP-10L Breakdown & Parts List	52
BDP-10A/BDP-16A/BDP-21L-Servicing & Repairing	54-66
BDP-10A Breakdown & Parts List	67
PK-12 Breakdown & Parts List	68
BDP-16A Breakdown & Parts List	69
BDP-21L Breakdown & Parts List	70
PW-21L (900D 1.3L) Breakdown & Parts List	71
H1-10 Breakdown & Parts List.	72
H1A-12 Breakdown & Parts List..	73
H3-10 Breakdown & Parts List.	74
H4-12 Breakdown & Parts List.	75
 G1 AND G2 TOOL KIT	 76-78
 HYDRO PUMP FLOW TEST KIT	 79-80
 G1/G2/H1/H2 PUMP & MOTOR APPLICATION GUIDE	 81-83
 TRANSMISSION MAINTENANCE	 84