



- 17 IGNITION FUSE 7.5 AMP.
- PTO FUSE 10 AMP.
- STOP SOLENOID 15 AMP.
- MAIN FUSE 15 AMP.
- 17 ACCESSORY FUSES
- START FUSE 30 AMP.