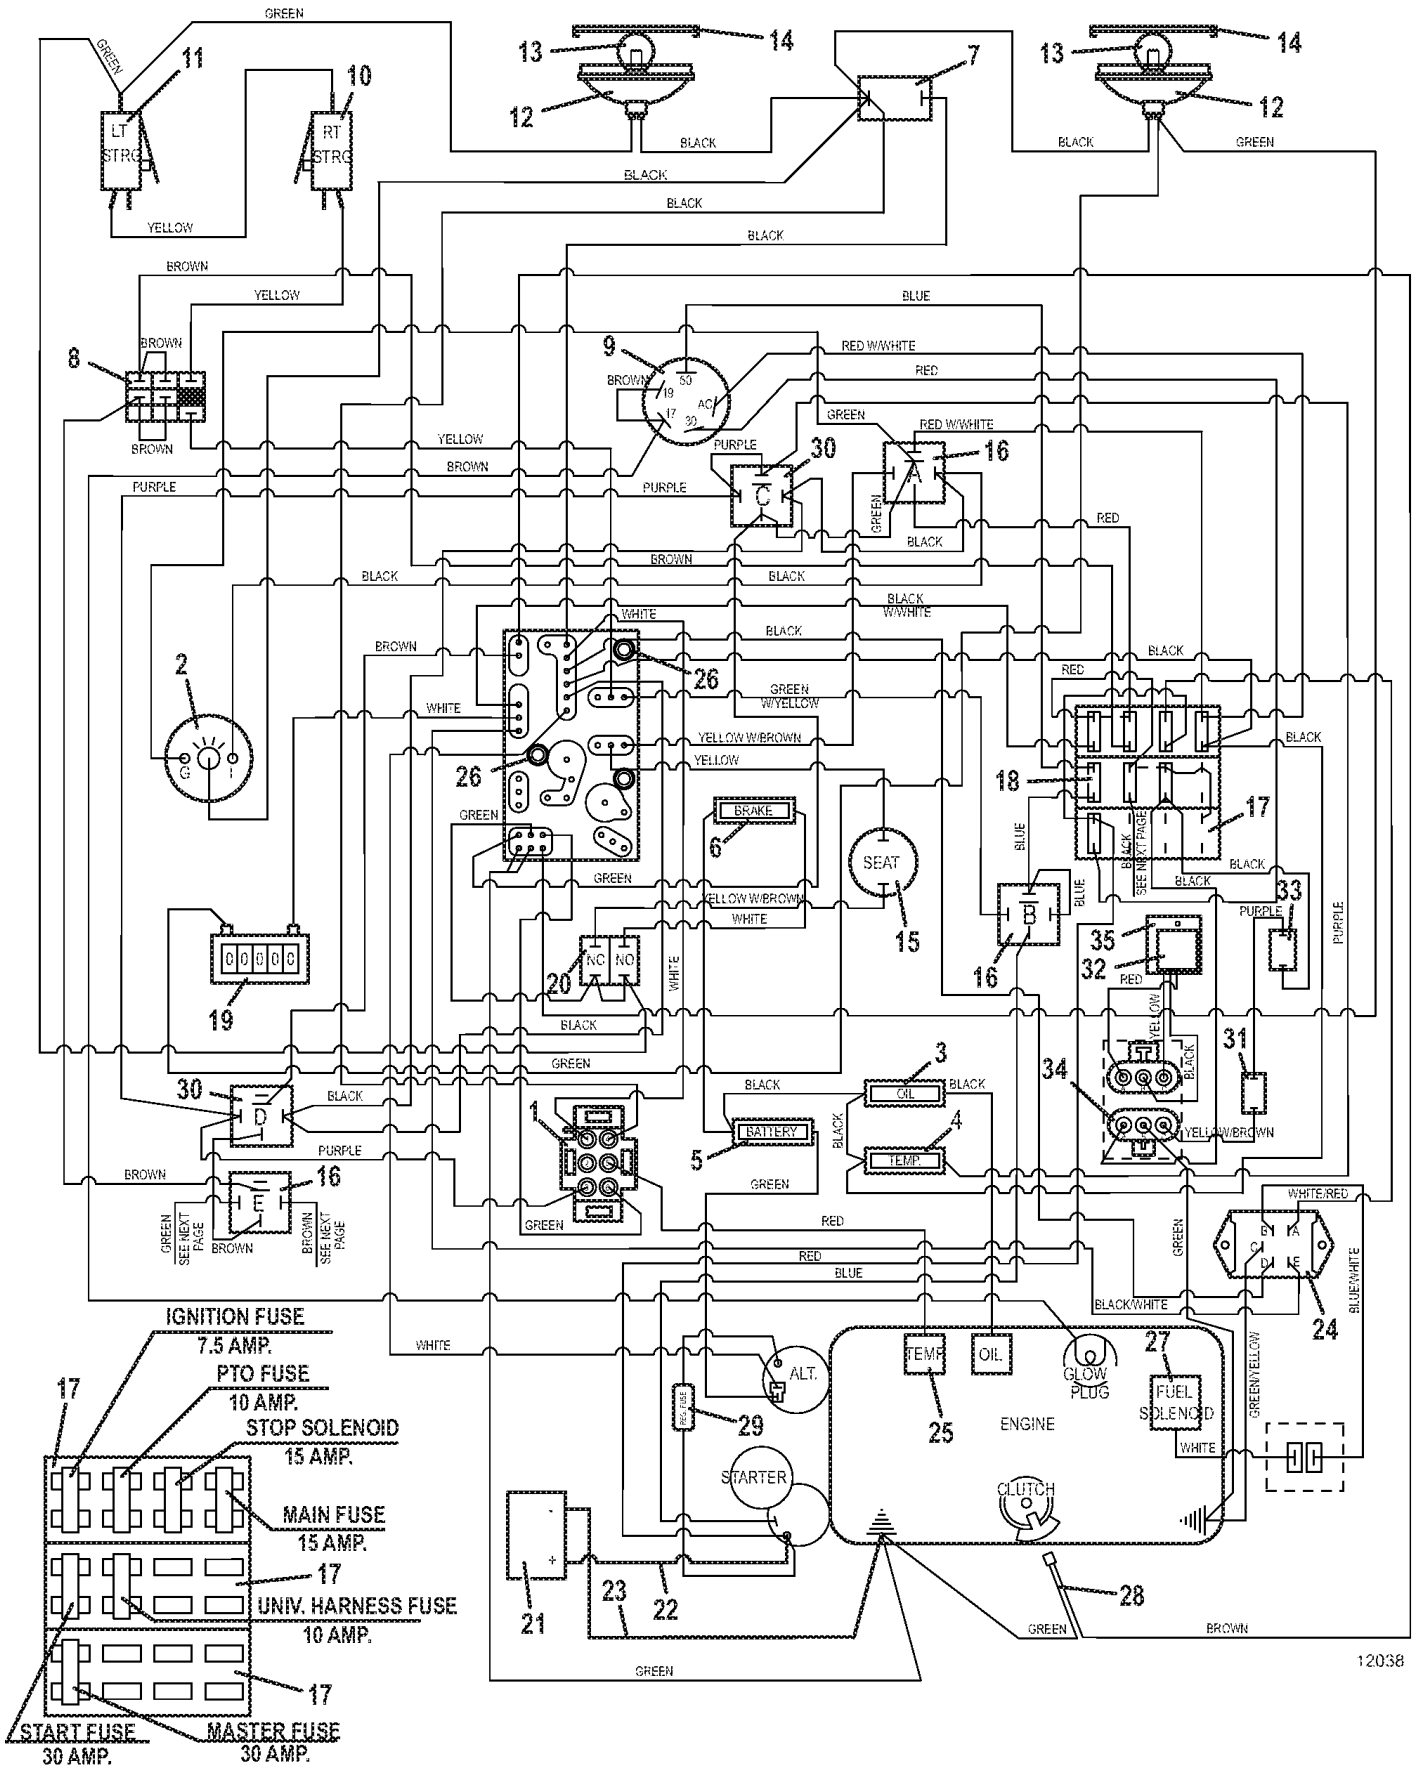
IGNITION FUSE
7.5 AMP.
PTO FUSE
10 AMP.
STOP SOLENOID
15 AMP.
MAIN FUSE
15 AMP.
UNIV. HARNESS FUSE
10 AMP.
START FUSE
30 AMP.
MASTER FUSE
30 AMP.
LT STRG
RT STRG
BRAKE
SEAT
BATTERY
OIL
TEMP
ALT.
STARTER
CLUTCH
GLOW PLUG
FUEL SOLENOID
ENGINE
SEE NEXT PAGE
12038