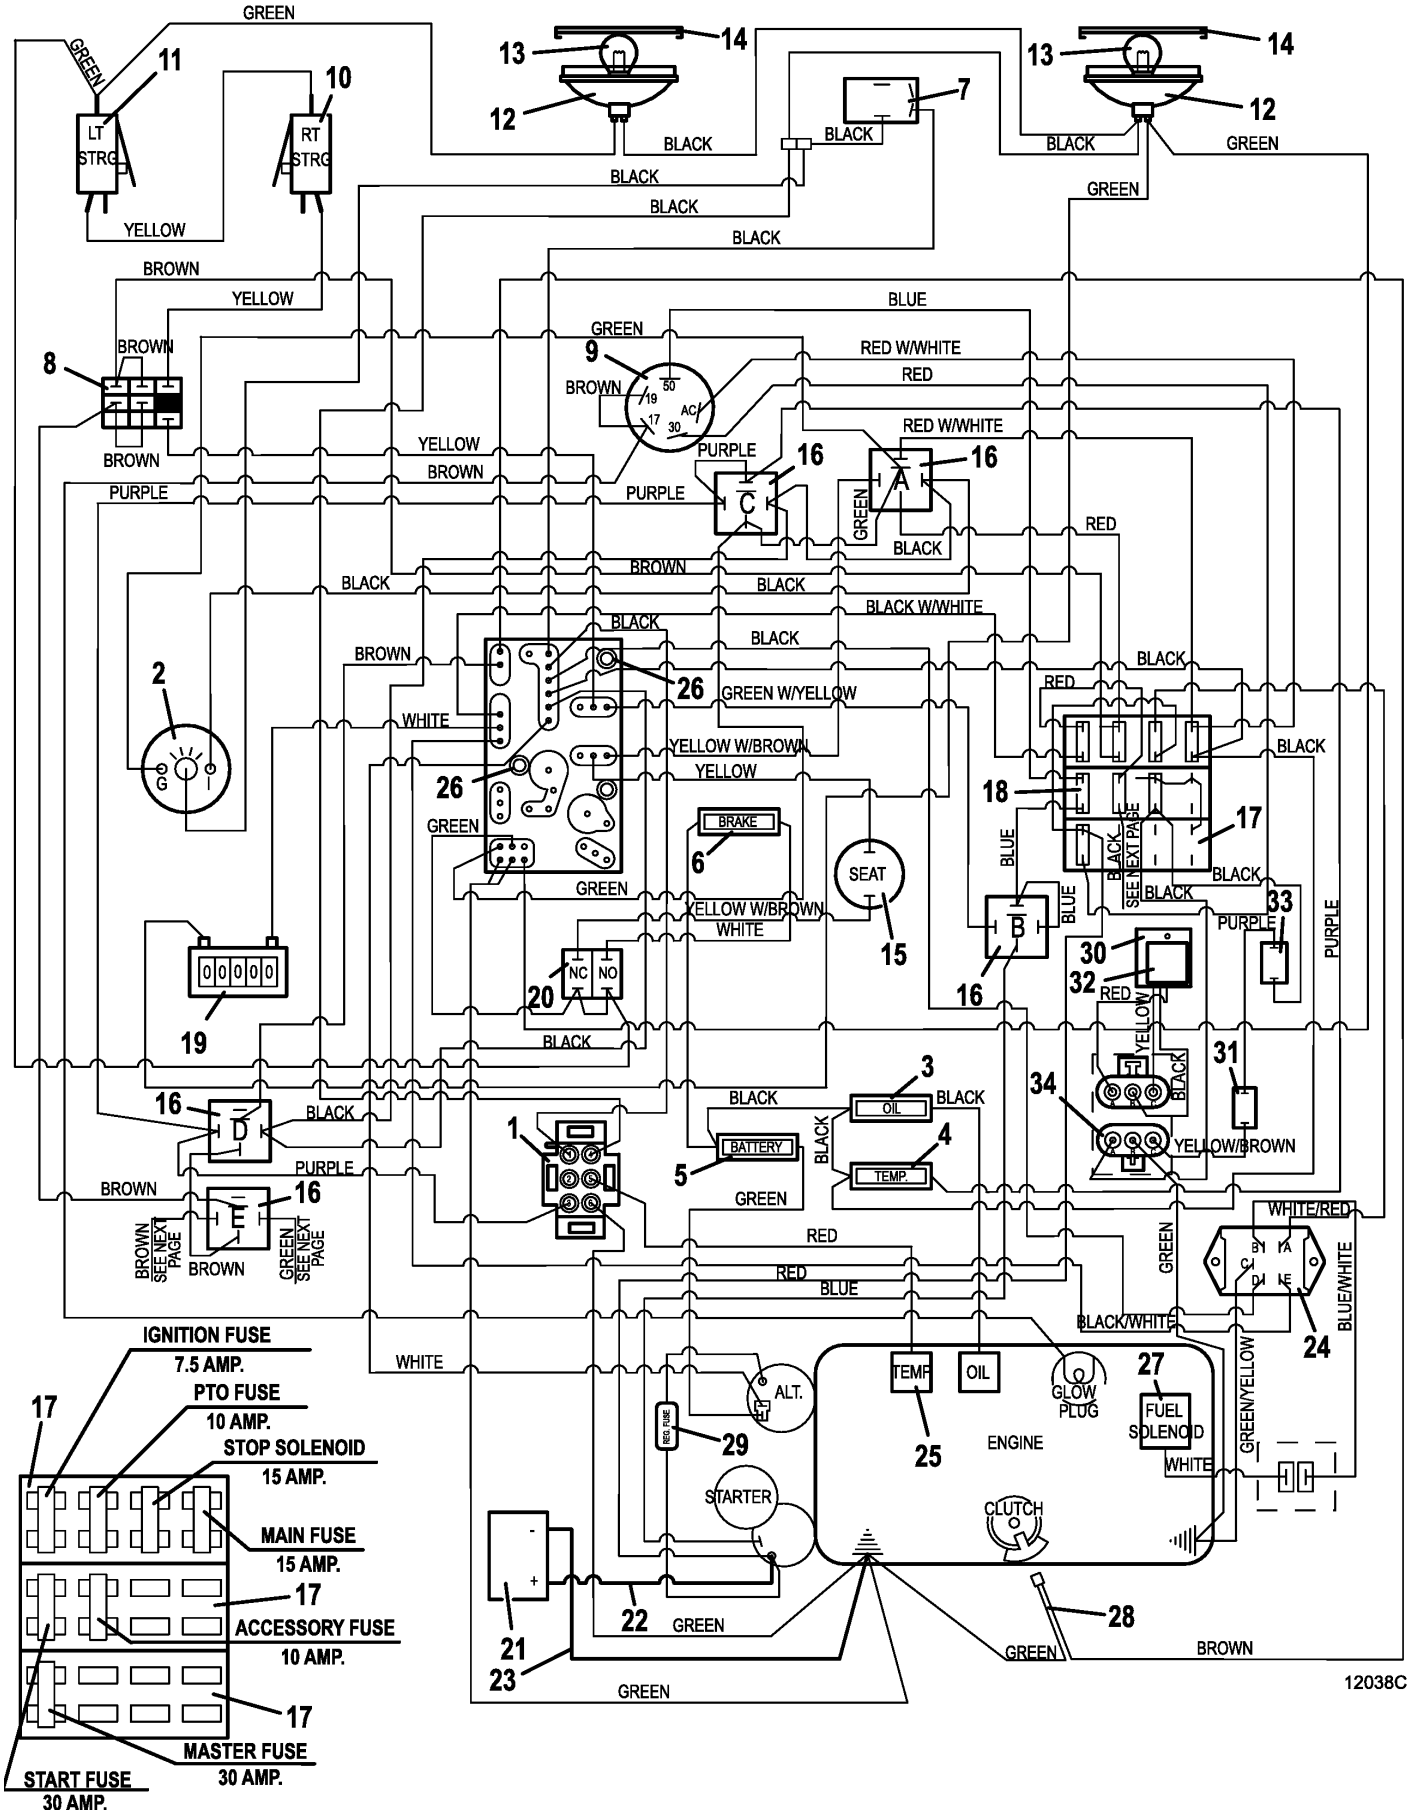
LT STRG
RT STRG
BRAKE
SEAT
OIL
BATTERY
TEMP.
NC
NO
ALT.
STARTER
RED FUSE
TEMP
OIL
GLOW PLUG
FUEL SOLENOID
ENGINE
CLUTCH
SEE NEXT PAGE
IGNITION FUSE
7.5 AMP.
PTO FUSE
10 AMP.
STOP SOLENOID
15 AMP.
MAIN FUSE
15 AMP.
ACCESSORY FUSE
10 AMP.
MASTER FUSE
30 AMP.
START FUSE
30 AMP.
12038C