




725A

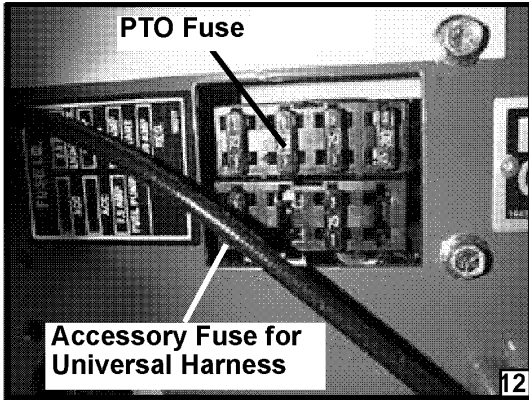

For 700 & 900 series with hydraulic lift:
 Route brown wires with double tab adapter to the hydraulic pump solenoid. Remove purple wire from solenoid and install this wire on open post of tab adapter. Install tab adapter on solenoid (see photo 13).

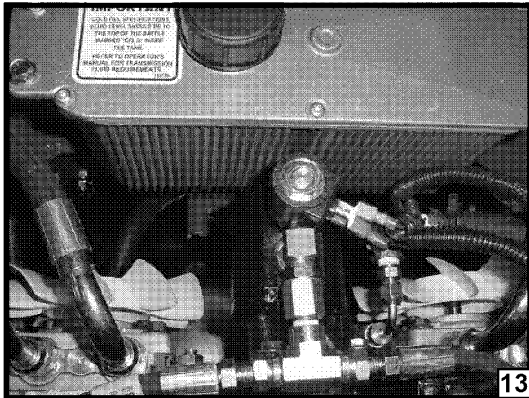

For 700 & 900 without hydraulic lift:
 Tie brown wires alongside frame with tractor wires (see photo 14).

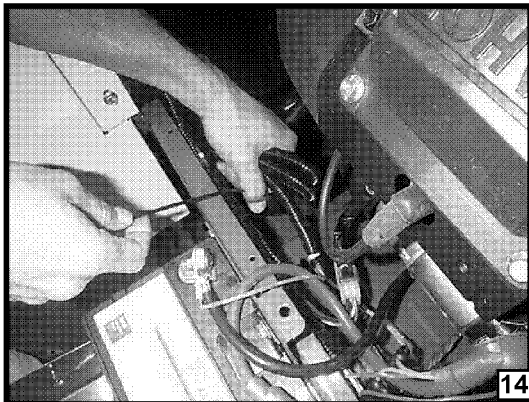

FOR 600 SERIES ONLY

(Refer to Fig. 3, page 7)

1. Remove tab adapter from brown wires on wiring harness.

NOTE 6: Tractors with serial #5700000 & above, the 60 inch black wire mentioned below is provided with the tractor wire harness as standard equipment. This wire is located with the safety switch wires under the left fender.

2. If NOTE 6 applies, skip to step 7 on page 5.
3. Locate 60" black wire. Disconnect 4 inch black wire with fuse clip. Plug in 4 inch adapter wire with female terminal into end of 60" wire (see photo 15 & 16).

