## **INSTRUCTIONS & INFORMATION**




## **BEACON KIT - ENCLOSURE**


Part Number 503327
Use on front mount Grasshopper models with 10.5 Model Enclosure

## **INSTALLATION INSTRUCTIONS:**

(Refer to illustration)

- Place unit on a flat level surface.
- Disengage PTO and stop engine.
- Set park brake and remove key from ignition.
- Locate the three holes in the cab top rear panel. Install grommet (item 3) in the center hole.
- Remove the two center whiz bolts from the back of the cab top. Attach the beacon mount (item 1) to the cab top and rear panel. Secure with four .25-20 x .5 whiz bolts and nuts (items 4 & 5).
- Mount the beacon to the beacon mount and secure with three 10-24 x .75 hex screws and nuts (items 6 & 7).
- Thread wires from beacon through grommets into cab. Wires will connect to wires installed in cab.
- Connect the red wire from the beacon to the blue butt connector on the red w/white wire.
   Connect the black wire to the blue butt connector on the green w/yellow wire. Crimp butt connectors.
- Red wire from beacon should run to switch box. Black wire should run to ground.
- Install 7.5 amp fuse (included in kit) in fuse slot marked BEACON located in the Enclosure switch box.



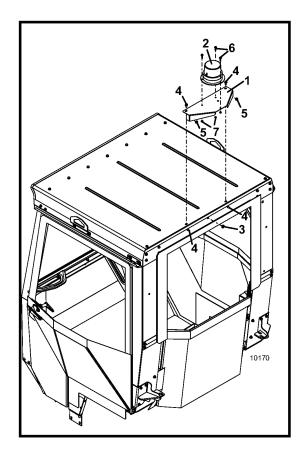

Item	Order	Description
No.	No.	
1	722992	Beacon Mount
2	604424	Beacon with Connectors
3	424229	Grommet
4	253173	Whiz Bolt $.25-20 \times .5$
5	253025	Whiz Nut .25-20
6	253167	Whiz Bolt 10-24 x .75
7	253020	Whiz Nut 10-24
	181460	Auto Fuse 7.5 amp.