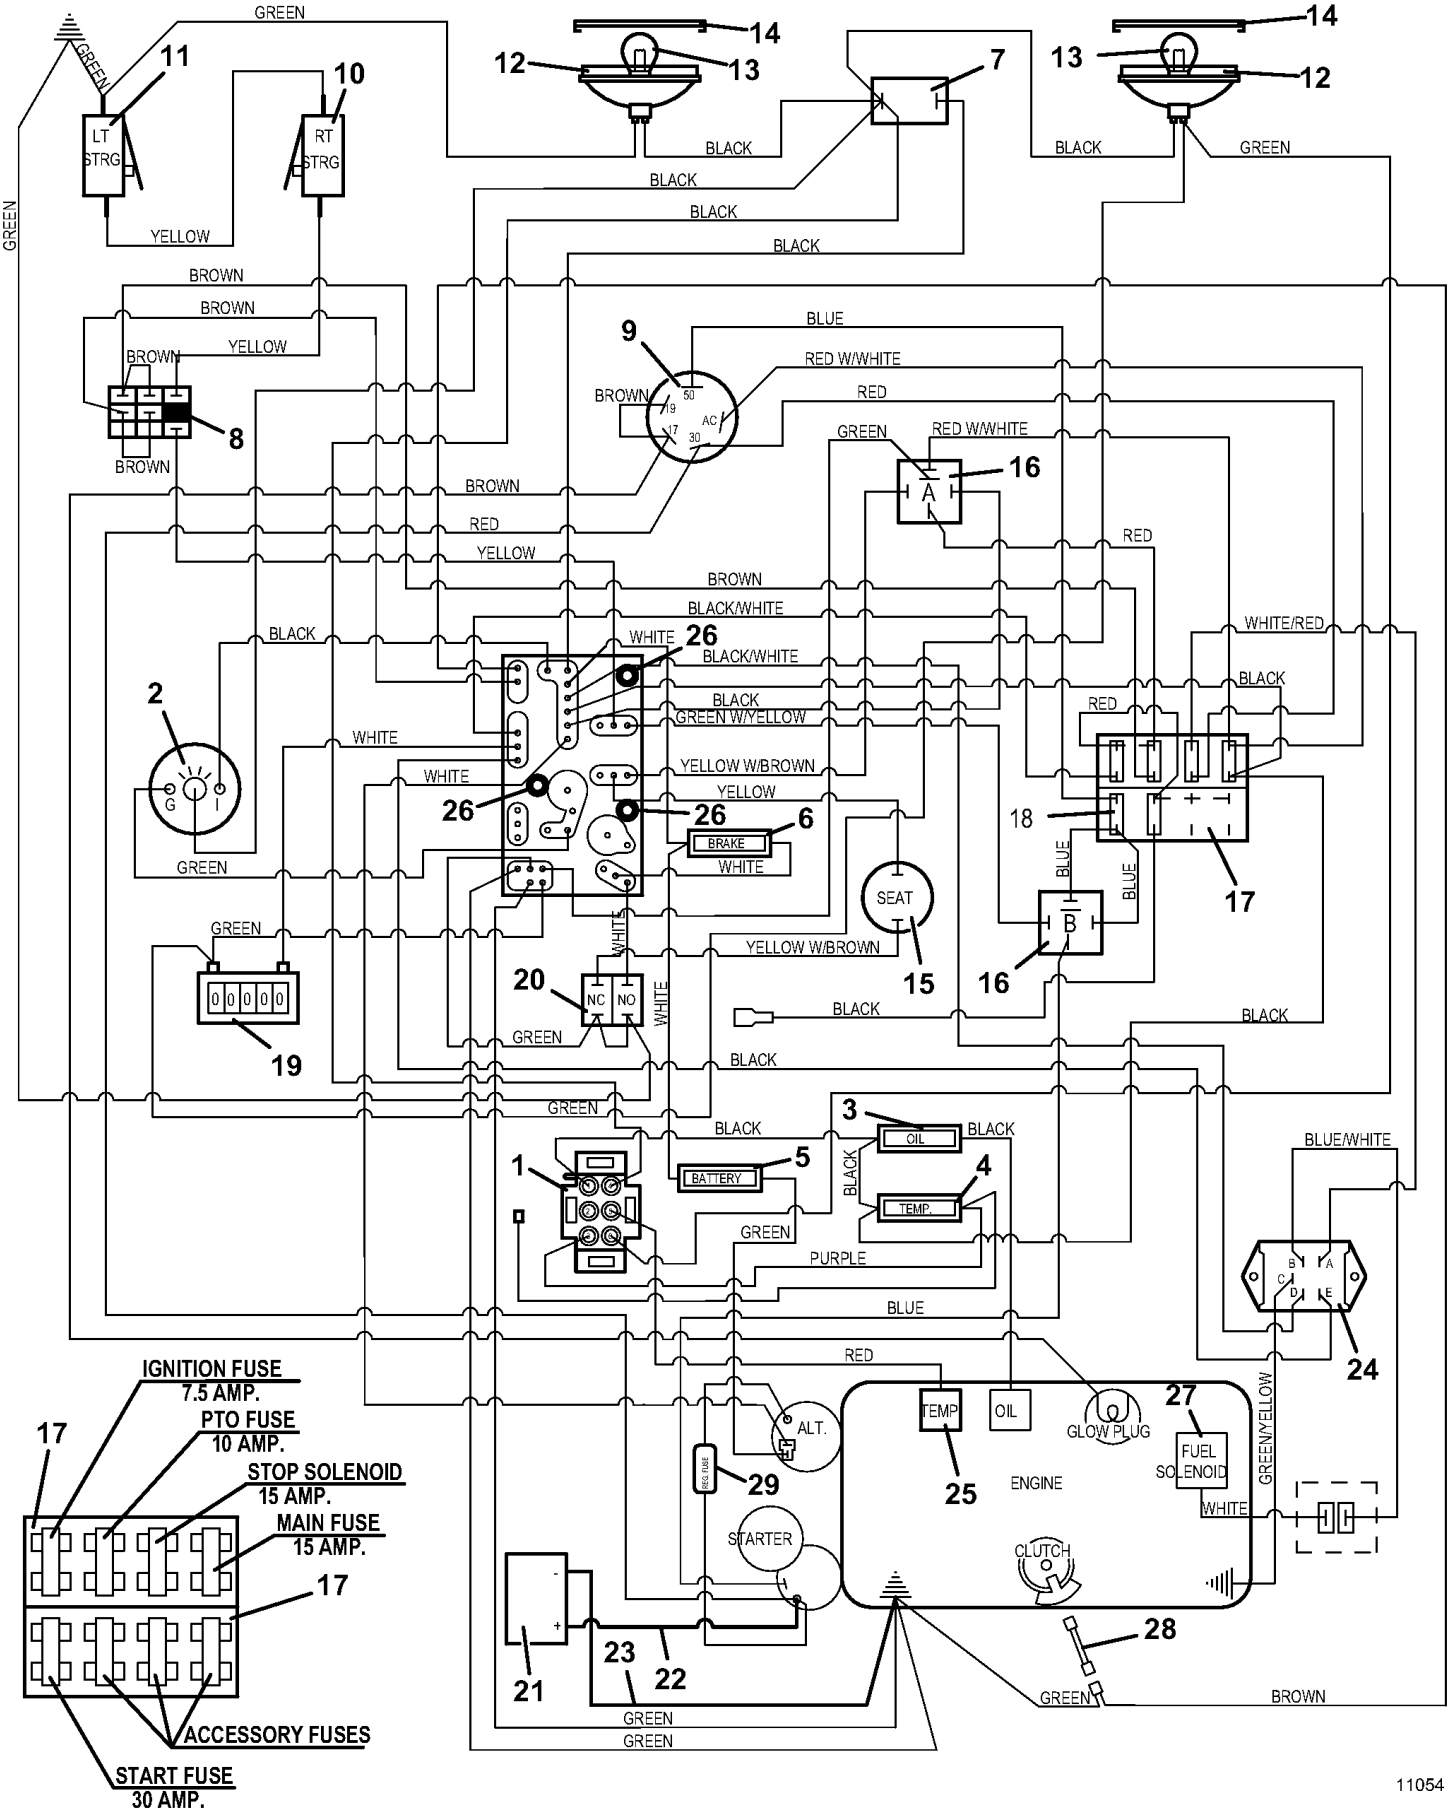
GREEN
GREEN
11
10
LT STRG
RT STRG
YELLOW
14
12
13
7
BLACK
BLACK
BLACK
BLACK
BLACK
GREEN
BROWN
BROWN
BROWN
YELLOW
BROWN
8
9
BLUE
RED W/WHITE
RED
BROWN
50
19
AC
17
30
GREEN
RED W/WHITE
16
A
BROWN
RED
YELLOW
BROWN
BLACK/WHITE
BLACK
WHITE
26
BLACK/WHITE
WHITE/RED
BLACK
2
BLACK
GREEN W/YELLOW
RED
WHITE
YELLOW W/BROWN
WHITE
YELLOW
26
26
6
BRAKE
WHITE
18
BLUE
BLUE
17
SEAT
15
16
B
GREEN
GREEN
19
WHITE
20
NC
NO
WHITE
YELLOW W/BROWN
BLACK
BLACK
GREEN
BLACK
GREEN
3
OIL
BLACK
BLUE/WHITE
1
BLACK
5
BATTERY
BLACK
4
TEMP.
GREEN
PURPLE
BLUE
24
RED
IGNITION FUSE
7.5 AMP.
PTO FUSE
10 AMP.
STOP SOLENOID
15 AMP.
MAIN FUSE
15 AMP.
17
17
ACCESSORY FUSES
START FUSE
30 AMP.
ALT.
29
STARTER
TEMP
OIL
GLOW PLUG
27
FUEL SOLENOID
25
ENGINE
CLUTCH
GREEN/YELLOW
WHITE
28
21
23
22
GREEN
GREEN
GREEN
BROWN

11054